

Fantasia Tau Ceiling Fan


Remote Control Removal Guide

Before working on any electrical appliance ensure you have isolated all power to the unit.
If at all unsure then consult a qualified electrician.


1. Unplug the cable and earth wire at the top of the rod and remove the ceiling fan from the ceiling
2. Uncover the black drop rod boss and loosen the set screws as shown



3. Take the pin out of the support bar and slide the support bar out of the drop rod boss
4. Remove all 6 screws from the top of the motor housing. Lift the motor housing off the motor

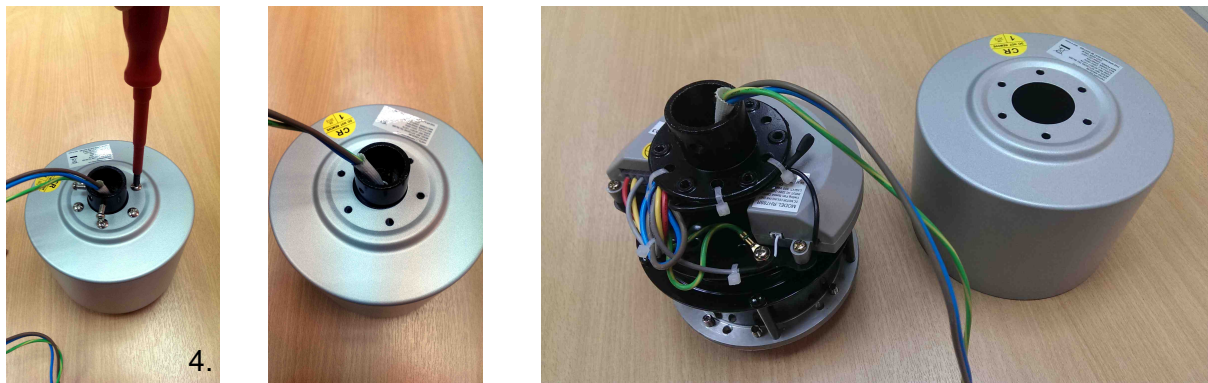

5. Unplug the 2 x cable plugs

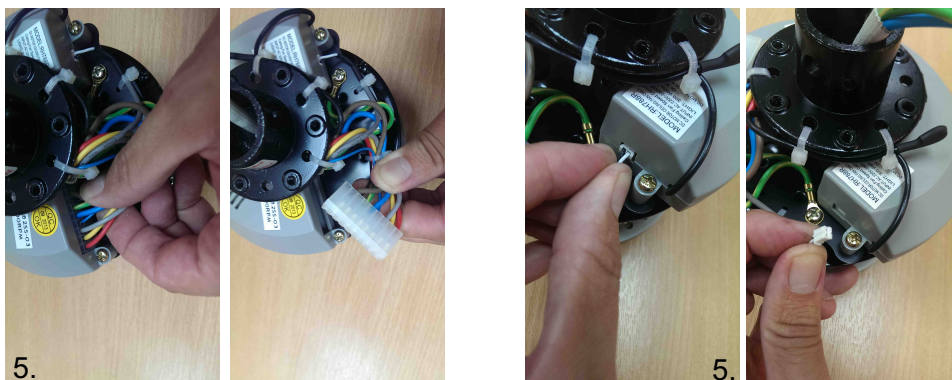

6. Remove the 2 x screws securing the receiver in place

